RadioShack LifeWise

Handheld Massager

63-1518

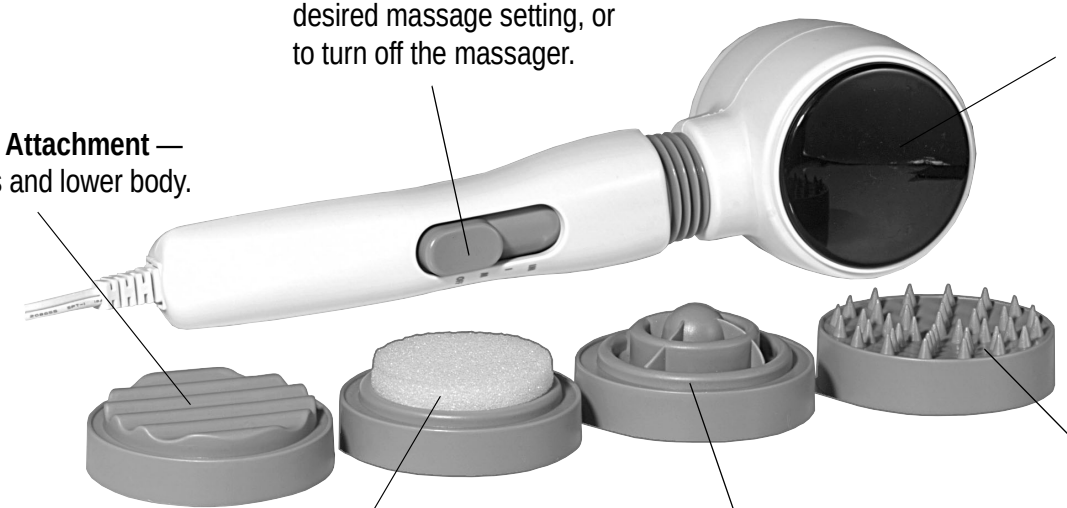

Step One

Connecting an Attachment

1. Select one of the four attachments.
2. Connect the attachment as shown. Make sure you do not connect the attachment to the infrared (red, heated) side.

Step Two

Connecting to AC Power

The massager is equipped with a polarized, AC power plug to prevent electric shock.

Connect the massager's AC power cord plug into a standard, 120V AC outlet. Do not force the plug into the outlet. It only fits one way.

What's Included

Massager | Four attachments | Owner's Manual

Step Three

Using the Massager

There are three massage settings:

IM — Infrared Massage

I — Infrared Only

⚠ WARNING ⚠
Do not connect or use an attachment while in Infrared Massage or Infrared Only modes. Doing so can cause the unit to overheat or melt.

M — Massage Only

OFF — Power Off

1. Connect an attachment, if desired.
2. Connect the massager to AC power.
3. Slide the switch on the side of the massager to the desired setting.
4. Gently apply massager to skin as shown.

5. When you are finished, turn off and unplug the massager.

Safety Instructions

- Do not place or store the massager where it could fall into a tub or sink.
- Do not try to pick up the massager if it falls into water or liquid of any kind. Unplug it immediately.
- Always unplug the massager before cleaning it and after use.
- Always plug the massager into a standard 120V, 60Hz AC outlet when using it.
- Do not alter the plug. If it does not fit in the outlet, do not force it. Call a qualified electrician to install the correct electrical outlet.

To reduce the risk of burns, fire, electrical shock, or injury:

- Do not use outdoors. This massager is intended for household use only.
- Close supervision is necessary when this appliance is used by, on, or near children.
- Never leave the massager unattended.
- Always turn the massager off and unplug it when removing or adding attachments.
- Do not use the massager under blankets or pillows. Excessive heat may build up, causing fire or shock hazard.
- Do not carry the massager by the power cord or use the power cord as a handle.
- Never drop or insert anything into any opening on the massager.
- Keep the cord away from warm or heated surfaces.
- Never use the massager if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the massager to a service center for examination and repair.
- Keep air openings clear of lint, hair, and other obstructions.
- Do not use massager where aerosol (spray) products are being used.
- Do not use the massager continuously for more than 20 minutes.

WARNING: **To reduce the risk of fire or shock hazard, do not expose this product to rain or moisture.**

CAUTION

RISK OF ELECTRIC SHOCK DO NOT OPEN

CAUTION: TO REDUCE THE RISK OF ELECTRICAL SHOCK, DO NOT REMOVE COVER OR BACK. NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED PERSONNEL.

The lightning symbol is intended to alert you to the presence of uninsulated dangerous voltage within this product's enclosure that might be of sufficient magnitude to constitute a risk of electric shock. Do not open the product's case.

The exclamation symbol is intended to inform you that important operating and maintenance instructions are included in the literature accompanying this product.

Care

Keep the massager dry; if it gets wet, wipe it dry immediately. Use and store the massager only in room temperature environments. Handle the massager carefully; do not drop it. Keep the massager away from dust and dirt, and wipe it with a damp cloth occasionally to keep it looking new.

Specifications

Power 120AC
Dimension ..... 280 x 85 x 70mm
Specifications are typical; individual units might vary. Specifications are subject to change and improve without notice.

Limited One-Year Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for 1 year from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

12/99

©2003 RadioShack Corporation.
All Rights Reserved.
RadioShack and RadioShack.com are trademarks used by RadioShack Corporation.

63-1518
Printed in China
07A03